

### **MMS/GPRS/SMTP Settings Operate as bellows:**

1. Open MMSCONFIG folder, and double-click MMSCONFIG.exe, as like  MMSCONFIG
2. Settings Menu for your requests  
(Note: only setting camera mode can send MMS)
3. Settings MMS for your country and SIM card APN
4. Phone setting-> write your phone number to it for MMS receiver.
5. Email setting->write your email address to it for MMS receiver.
6. Click “Save”, the software will generate a “Parameter.dat” in same MMSCONFIG folder.
7. Copy “Parameter.dat” to SD card root
8. Insert SD card to hunting camera SD card slot.
9. Insert a GSM 2G SIM card to SIM card slot, and open SIM card MMS/GPRS functions.
10. Put battery into hunting camera
11. Put switch to test position, and check “camera mode”, and then switch on position.
12. At this time, camera screen will shut off, test light will flashing, and then camera will enter into PIR motion detection status.
13. It will take photo and send photo to your setting mobile phone number and email address when it has detected human body or animals.

### **SMTP Setting:**

SMTP on/off-> on

SMTP Mode-> Manual

### **Server Setting:**

Server-> for your mailbox server

Port->for your mailbox port number

Email-> for your email address

Password-> for your email password

Note: this email info must setting ok, or else can not send pictures to others email address.

### **GPRS Setting:**

APN→ for your SIM card GPRS APN, not SIM card MMS APN

Account→ for your SIM card GPRS APN account.

Password→ for your SIM card GPRS APN password.

If no account and password, please don't write them.

### **Email setting:**

Email 1→ for receiver email address one

Email 2→ for receiver email address two

Email 3→ for receiver email address three

Email 4→ for receiver email address four

Click "Save" button, it will save a "parameter.dat" file, and then copy this file to SD card root.